

# GruvenParts.com Universal Billet Dipstick Handle Installation Instructions

## Step 1.

Cut the plastic portion of the handle down to the internal steel wire using a sharp knife or dremel tool (USE EYE PROTECTION!). Be careful not to cut the steel wire. Once you cut the plastic handle, pull hard to remove it completely from the internal wire.




## Step 2.

Use a dremel tool or equivalent to cut the steel wire leaving 1/4" protruding. USE EYE PROTECTION!



### **Step 3.**

Attach threaded ring to the steel wire using the supplied set screws and allen wrench. Tighten in alternating order. You may use Loctite or equivalent at this step if desired. You may also use a suitable 2 part epoxy to bond threaded ring onto dipstick wire if desired.

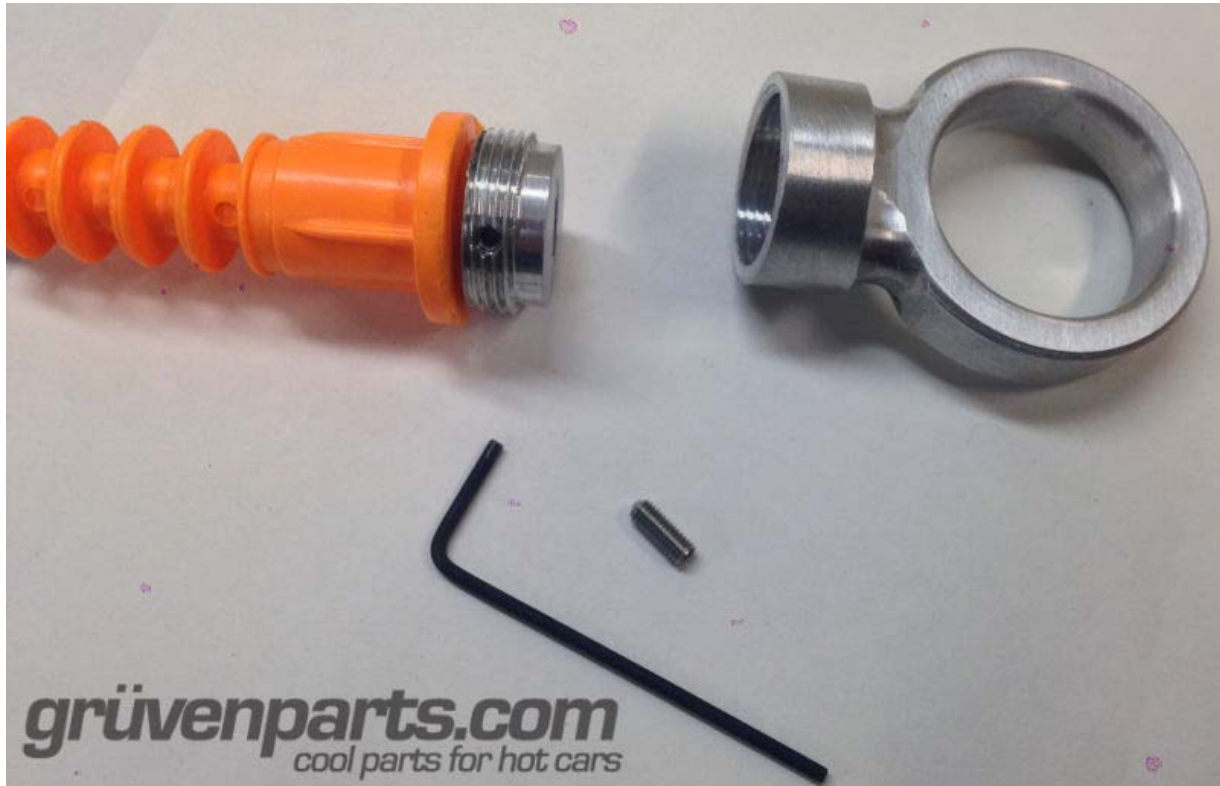

### **Step 4.**

Thread handle onto ring and tighten securely.

